


# Replacing a 2U Bezel

This document describes how to remove and replace a bezel on an N2000, S2000, or REO 4600 from Overland Storage. There are two versions:

## Version 1:



## Version 2:

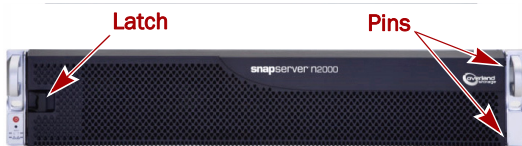

## Replace the Bezel

### Remove the Old Bezel

1. If necessary, unlock the **bezel**.
2. Press the **release latch** toward the center.

3. Pull the latch **side** out about 2 inches (5cm).
4. Pull the entire bezel toward the latch side to release the **pins** in the opposite flange.
5. Set the **old bezel** aside.

### Install the New Bezel

1. Remove the new **bezel** from the box.
2. Unlock the bezel using a supplied **key**.
3. Insert the **pins** in the flange opposite the latch.
4. Push the bezel **latch side** toward the server until it catches.
5. If desired, **lock** the bezel.

## Return Removed Part to Overland

1. Place any **removed part** in the anti-static bag and put it in the replacement part's box.
2. Return the old part to **Overland Storage**.

For return shipping details and RMA number, go to: <http://support.overlandstorage.com/support/support-return-instructions.html>

You can get additional technical support on the Internet at <http://support.overlandstorage.com>, or by contacting Overland Storage using the information found on the [Contact Us](#) page on our web site.

