


Warning!

Read This First

After initial power up with new drives, a SnapServer appliance can take up to **10 minutes** to complete the new appliance initialization process. During this time, the Status LED (see graphic) flashes an alternating green and amber pattern.

 **WARNING:** Under no circumstances should power be removed while the system is in this state! Doing so may render the appliance inoperable.

Once initialization is complete, the system automatically reboots and the Status LED displays a solid green color. Continue with **Connect for the First Time** in your quick start guide.



Status LED XSR 40



Status LED XSR 120

