


Warning!

Read This First

After initial power up with new drives, a SnapServer head unit or SnapScale node can take up to **10 minutes** to complete the new appliance initialization process. During this time, the Status LED flashes an alternating green and amber pattern.

 **WARNING:** Under no circumstances should power be removed while the system is in this state! Doing so may render the appliance inoperable.


Once initialization is complete, the system automatically reboots and the Status LED displays a solid green color. Wait for the reboot to complete before continuing with **Connect for the First Time** in your Quick Start Guide.



Warning!

Read This First

After initial power up with new drives, a SnapServer head unit or SnapScale node can take up to **10 minutes** to complete the new appliance initialization process. During this time, the Status LED flashes an alternating green and amber pattern.

 **WARNING:** Under no circumstances should power be removed while the system is in this state! Doing so may render the appliance inoperable.

Once initialization is complete, the system automatically reboots and the Status LED displays a solid green color. Wait for the reboot to complete before continuing with **Connect for the First Time** in your Quick Start Guide.

