

# Spare Power Supply Replacement Instructions


This document describes how to remove and replace a power supply in a NEO Agility appliance from Overland Storage.

**WARNING:** To reduce the risk of electric shock or damage to equipment, always remove any power cords while working with the appliance.

**WARNUNG:** Um das Risiko eines elektrischen Schlags oder Schäden am Gerät zu vermeiden, ziehen Sie stets den Netzstecker, bevor Sie an der Einheit arbeiten.

**AVERTISSEMENT:** Pour réduire le risque de choc électrique ou endommagement de l'équipement, retirez toujours les cordons électriques en travaillant avec l'appareil.

**CAUTION:** While working with the appliance, observe standard Electrostatic Discharge (ESD) precautions to prevent damage to micro-circuitry or static-sensitive devices.

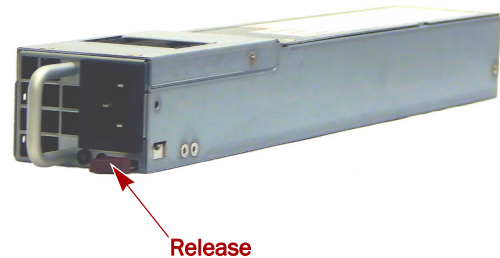

## Install/Replace Power Supply

### Remove Old Power Supply

Power supplies can be hot-swapped in Agility appliances.

1. Remove the **power cord** of the power supply module that is being replaced.
2. On the **old power supply**, press the release latch down and pull the module out of the bay using the handle.
3. Place the module on a **secure surface**.



### Install New Power Supply

1. Position the **new power supply** module in front of the empty bay.
2. Slide the **module** into the empty bay until it locks (clicks).
3. Pull the **handle** to verify that it is secure.
4. Reconnect the **power cord**.  
The Power Supply LED should glow green.



### Return Replaced Parts to Overland

1. Place the **replaced part** in the anti-static bag and put it in the replacement part's box.
2. Use the existing **packing material** to secure it in the box.
3. Use an RMA to return the part to **Overland Storage**.

For return shipping details and RMA number, go to:  
<http://docs.overlandstorage.com/return-instructions>.

