

Add-on/Spare Tape Magazine Instructions


This document describes how to either add a Tape Magazine or remove and replace an existing Tape Magazine in a NEOxl 40 (3U) tape library from Overland-Tandberg.

WARNING: To reduce the risk of electric shock or damage to equipment, always remove any power cords while working with the library.

WARNUNG: Um das Risiko eines elektrischen Schlags oder Schäden am Gerät zu vermeiden, ziehen Sie stets den Netzstecker, bevor Sie an der Einheit arbeiten.


AVERTISSEMENT: Pour réduire le risque de choc électrique ou endommagement de l'équipement, retirez toujours les cordons électriques en travaillant avec l'appareil.

CAUTION: While working with the library, observe standard Electrostatic Discharge (ESD) precautions to prevent damage to micro-circuitry or static-sensitive devices.

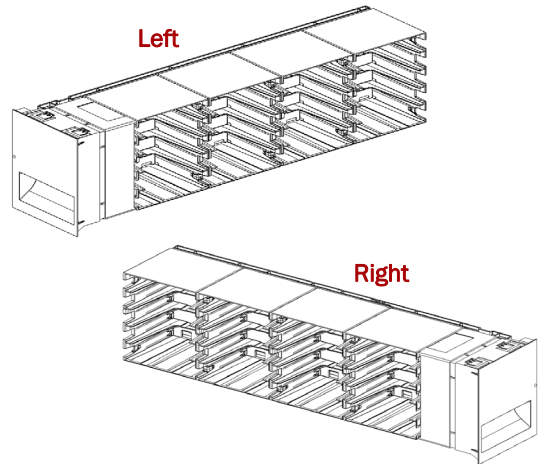

Install/Replace Tape Magazine

1. When **replacing** a magazine:
 - a. If necessary, use the **OCP** or **RMI** to identify the Tape Magazine needing replacement.
 - b. Press and hold the Tape Magazine **LED button** beside the pull handle for three (3) or more seconds.
If power is OFF, use the magazine unlock feature located on the center outside edge of the Tape Magazine. See red circles.
 - c. When the LED starts flashing and the OCP shows unlocked, carefully pull the **old** Tape Magazine out of the bay.
2. Align and slide the appropriate **new** Tape Magazine into the bay until it stops.

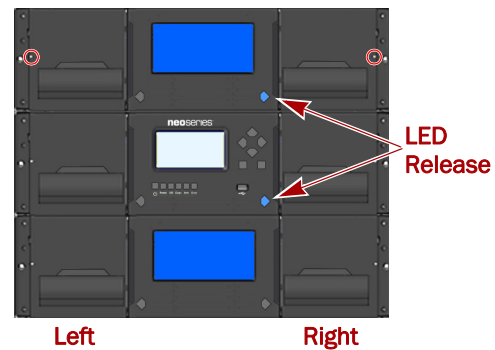

Return Replaced Part to Overland

1. Place the **replaced part** in the anti-static bag and put it in the replacement part's box.
2. Use the existing **packing material** to secure it in the box.
3. Use an RMA to return the part to **Overland-Tandberg**.
For return shipping details and RMA number, go to: <http://docs.overlandstorage.com/return-instructions>.

