

## SnapExpansion® Manual Power Addendum

July 2018



Some SnapExpansion appliances do not support automated power control and must be powered on and off manually.

### Power On Procedure

To ensure that all the units power on correctly:

1. Manually power on all the SnapExpansions attached to the system.  
Units that support automated power control will power on automatically when at least one other unit is powered on.
2. Once all the units are ON and the LEDs lit, power on the SnapServer head unit.

### Power Off Procedure

To ensure that all the units power off correctly:

1. Using the Web Management Interface, power off the SnapServer head unit.  
SnapExpansion units that support automated power control will power off automatically. However, if a unit that does not support automated power control is still on, the units will power back on.
2. Manually power off all the SnapExpansions attached to the system.

### Power Loss Recovery

If the system is running and there is a sudden loss of power, the SnapServer head unit and all SnapExpansions, both those that support automated power control and those that don't, automatically return to a powered-on state when the power returns.