

RDX® QuikStation® 4
1U Storage Appliance



Rack-mount



Desktop

Step 1

Register the Unit

It is **essential** to activate your warranty. Technical and warranty support are **not available** until the warranty is active:

1. Go to <https://www.overlandtandberg.com/service-support/customer-product-registration/>.
2. Click **Register**.
3. Fill in the information (including serial number) and click **Submit**.

Your warranty certificate will be emailed to you. Follow the email instructions to complete the registration process.

Step 2

Unpack the Unit

Place the unit and any supplied RDX cartridges on a secure surface.

WARNING: To reduce the risk of electric shock or damage to equipment, always remove any power cords while working with the unit.

WARNUNG: Um das Risiko eines elektrischen Schlags oder Schäden am Gerät zu vermeiden, ziehen Sie stets den Netzstecker, bevor Sie an der Einheit arbeiten.

AVERTISSEMENT: Pour réduire le risque de choc électrique ou endommagement de l'équipement, retirez toujours les cordons électriques en travaillant avec l'appareil.

Save the packaging materials in case the unit is returned or shipped for any reason.


Step 3

Install Rails in Rack

The rack version of the RDX QuikStation 4 is designed for use in a 19-inch rack using 1U of rack space.

NOTE: The length of the power cord and the Ethernet cables may restrict placement.

Ensure that the airflow around the front and back of the unit is not obstructed, dust is kept to a minimum, and there is at least 12cm (4.75 in.) free space in front of the unit to allow the operators to safely remove the RDX cartridges.

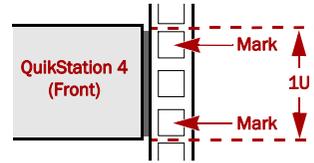


1. Determine the **1U area** where the QuikStation 4 is to be mounted and mark both sets of the **first** and **third** holes on the front rails.

2. At the rear, mark the same **first** and **third** holes.

3. **Measure** the gap between the front and rear rack rails.

- If the measurement is **less** than the length of the QuikStation 4, secure the **first** and **third** mounting rail holes with M4x12 screws, washers, and nuts.
- If the measurement is **equal to or greater** than the length of the QuikStation 4, secure the **second** and **fourth** mounting rail holes with M4x12 screws, washers, and nuts.

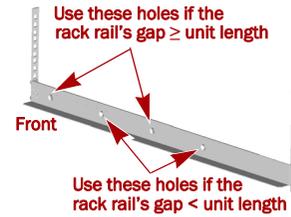

4. Align the **left-front flange** with the two marked holes on the front rack rail and loosely attach the left-side mounting rail with two screws.
5. Ensure the mounting rail is level and attach it loosely to the **rack rear** with two screws.
6. Repeat **Steps 4–5** for the **right-side rail**.
7. Verify both rails are level and then securely tighten **all screws**.

Installing the Unit in the Rack

1. Lift and position the **unit** onto the rails and push it in until the front brackets are touching the rails. Verify that the unit is level and the QuikStation 4 thumbscrews align with the appropriate rail holes.



2. Using the **two provided screws**, attach the QuikStation 4 brackets to the **bottom holes** in the rack and tighten them just enough to support the appliance.
3. Verify that the appliance is level, and **tighten the screws** evenly.

WARNING: Do not place anything on top of the rack-mounted unit when it is extended from the rack.


WARNUNG: Stellen Sie nichts auf die Rackeinheit, wenn diese aus dem Rack herausragt.

AVERTISSEMENT: Ne rien poser sur l'unité installée dans le rack lorsqu'elle est étendue du rack.

Step 4

Connect Network Cables and Power Cords

All power connections, cable ports, and cooling vents are located on the rear panel of the QuikStation 4.

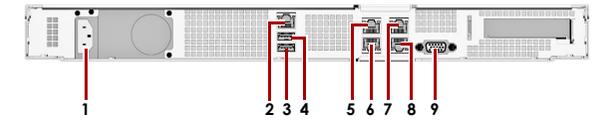

- 1 - AC Power Plug
- 2 - 1 Gb IPMI Port
- 3 - USB 2.0 Port (USB1)
- 4 - USB 2.0 Port (USB0)
- 5 - 1 Gb Ethernet Ports (eth2)
- 6 - 1 Gb Ethernet Ports (eth0)
- 7 - 1 Gb Ethernet Ports (eth3)
- 8 - 1 Gb Ethernet Ports (eth1)
- 9 - VGA/Display Port

1. Connect one or more of the 1 Gb Ethernet ports to the **network** ports of a switch, hub, or router on the same LAN as the host system being used to manage the QuikStation.

NOTE: For failover protection and maximum performance, connect all four 1 GbE network ports.

2. Connect the power cord to the QuikStation, and plug the **power cord** into either a UPS appliance or a properly grounded AC power source.
3. Turn the power on by pressing the **power button/LED** on the front center of the unit.

Install Cartridges

1. Position an **RDX cartridge** at an empty RDX dock opening with the "key" (angled edge) at the upper left.
2. Push the **cartridge** in until it locks in place.
3. Repeat **Steps 1–2** for **each** remaining cartridge.

Step 5

Obtain the IP Address

The default QuikStation 4 network configuration is set for dynamic IP addresses (DHCP), but static IP addresses are also supported. Use one of these two ways to determine an IP address:

USB:

1. Using a USB stick with a single MBR partition formatted with either FAT32 or NTFS, create an empty **network.info** file on it.
2. **Insert the stick** in the USB port on the front of the unit and wait at least 30 seconds for the network information to download to the file.
3. Move the USB stick to a **host computer** and scan the updated **network.info** file to determine the available IP addresses.

Video Monitor:

1. With the appliance off, attach a **monitor** to the VGA display port.
2. Attach a **keyboard** as appropriate.
3. **Power on** the unit by pressing the power button. After the unit initializes, the IP addresses are displayed.

Assign a Static IP Address

If DHCP support is not enabled, set a static IP address for the unit:



CAUTION: The file name “network.conf” must be **all lowercase** letters.

1. Create a **network.conf** file on a USB stick with these entries:

```
BOND0_IP4_CONFIG=static
BOND0_IP4_ADDR=nnn . nnn . nnn . nnn
BOND0_IP4_GW=nnn . nnn . nnn . nnn
BOND0_IP4_PREFIX=nn
```

Use your IP address, gateway, and prefix to replace the “n” variables as required.

2. **Insert the stick** in the USB port on the front of the unit and wait at least two minutes for the **network.conf** file to update the unit.
3. Remove the **USB stick**.

The unit will restart with the updated network settings.

NOTE: If the unit does not reboot automatically, recheck network.conf filename to ensure it is all lowercase letters. You may need to use a Linux or MacOS host system to check a filename as Windows OS can change the filename to uppercase but cannot display it.

For more information, see the *RDX QuikStation 4 & 8 Product Manual*.

Connect to Remote Management Console

Use a web browser to connect to the RDX QuikStation 4 Remote Management Console (RMC) from any computer on the same network as the QuikStation 4. Supported operating systems include Microsoft Windows, Linux, and Apple MacOS.

The first time the user logs into the RDX QuikStation, they are required to create a new, uncommon Administrator's password.

1. In a browser on a network host, type the **IP address**.
A reset password pop-up screen is displayed.
2. Enter and verify a new, unique password.
The password must meet the following requirements:
 - It must be between 12 to 30 characters in length.
 - The password is case sensitive and can contain only letters, numbers, and any of these special characters:
- . ! @ # \$ % ^ & * _ “ ” ,
 - Password is allowed only if it is uncommon and meets certain complexity minimums.

Once the unique password is set, it can be used with the host VTX name (“vtx1u”) to log into the console.

Step 6

Configure the RDX QuikStation 4

You can configure your RDX QuikStation 4 in various operational modes (see the *RDX QuikStation 4 & 8 Product Manual*).

1. Using the RMC, select the **device type** from the dialog window.
2. Click **OK**.

The system restarts and your selected device configuration is shown.

NOTE: If you have any RDX cartridges loaded into the RDX QuikStation, the system will eject the cartridges when it restarts.

Step 7

Connect to iSCSI Targets

In iSCSI terminology, a host computer is referred to as an **initiator** and the storage device it connects to as the **target**.

NOTE: QuikStation and host computers must reside on the same network.

To establish an iSCSI connection in Windows Server:

1. Open the Microsoft iSCSI Initiator and click the **Discovery** tab.
2. Click **Discover Portal** to enter the IP address for the QuikStation 4.
3. Click **OK**.
4. Click the **Targets** tab.
5. Select the target you want to connect to and click **Connect**.

For more information on how to connect to targets, refer to the *RDX QuikStation 4 & 8 Product Manual* and your OS documentation.

Prepare for and Perform a Backup

1. If needed, install a **backup application**. The link to the Software Compatibility Matrix is available at the top of:
<https://overlandtandberg.atlassian.net/wiki/spaces/KNOW/overview>
2. **Launch and configure** the backup application software.
For questions regarding software installation, configuration, and operation, refer to your backup software product documentation or contact your software provider.

Step 8

For product information, support, and documentation, visit our website:
www.overlandtandberg.com

Additional RDX Cartridges

To purchase RDX media cartridges, contact your Overland-Tandberg Partner or go to **Products > RDX Solutions > RDX Media** on our website and select the Where to Buy button.

Warranty and Technical Support

For warranty and technical support information, see our **Support Tools** under the **Support** menu option.

For information on contacting Overland-Tandberg Support, see our **Contact Support** web page under the **Contact** menu option.

User Guides and Articles

For detailed information on configuring your RDX QuikStation 4, refer to the *RDX QuikStation 4 and 8 Product Manual*. The product manual, this quick start guide, and other knowledge base articles are **available online** at:

<https://overlandtandberg.atlassian.net/wiki/spaces/KNOW/overview>

Product Information

Product name: **RDX QuikStation 4**

Model/Type Reference: **RMN-A-01-14**

Manufacturer: **Tandberg Data**

European Regulatory Address: **Tandberg Data GmbH, Nikolaus-Groß-Straße 13, 44329 Dortmund, Germany**

Power Ratings

Input Voltage	100 - 240 VAC
Input Rated Current	2.0-1.0 A
Rated Input Frequency	50-60 Hz

Safety Precautions



CAUTION: Be aware of the location of the power ON/OFF switch on the front of the RDX QuikStation 4 chassis as well as the room's emergency power-off switch, disconnection switch, or electrical outlet used. If an electrical accident occurs, you can then quickly remove power from the system.

The rack version of the RDX QuikStation 4 is intended for use when mounted in a standard rack. It may be used on a shelf or table top as long as the area is free of clutter to ensure proper ventilation.

The unit is intended for indoor use only. Use an appropriate power supply cord with a grounded plug and a grounded electrical outlet. The outlet must be near the equipment and easily accessible.

FCC Compliance Notice



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Environment Friendly Disposal



You can help protect the environment! Please remember to respect the local regulations and hand in the non-working electrical equipments to an appropriate waste disposal center. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
机箱/风扇 Enclosure / Fan	X	O	O	O	O	O
印刷电路板组件 PCAs	X	O	O	O	O	O

本表格依据 SJ/T 11364 的规定编制。

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。



<https://www.overlandtandberg.com>

<https://www.tandbergdata.com>

©2019-21 Overland-Tandberg

10401049-002

RMN-A-01-14